


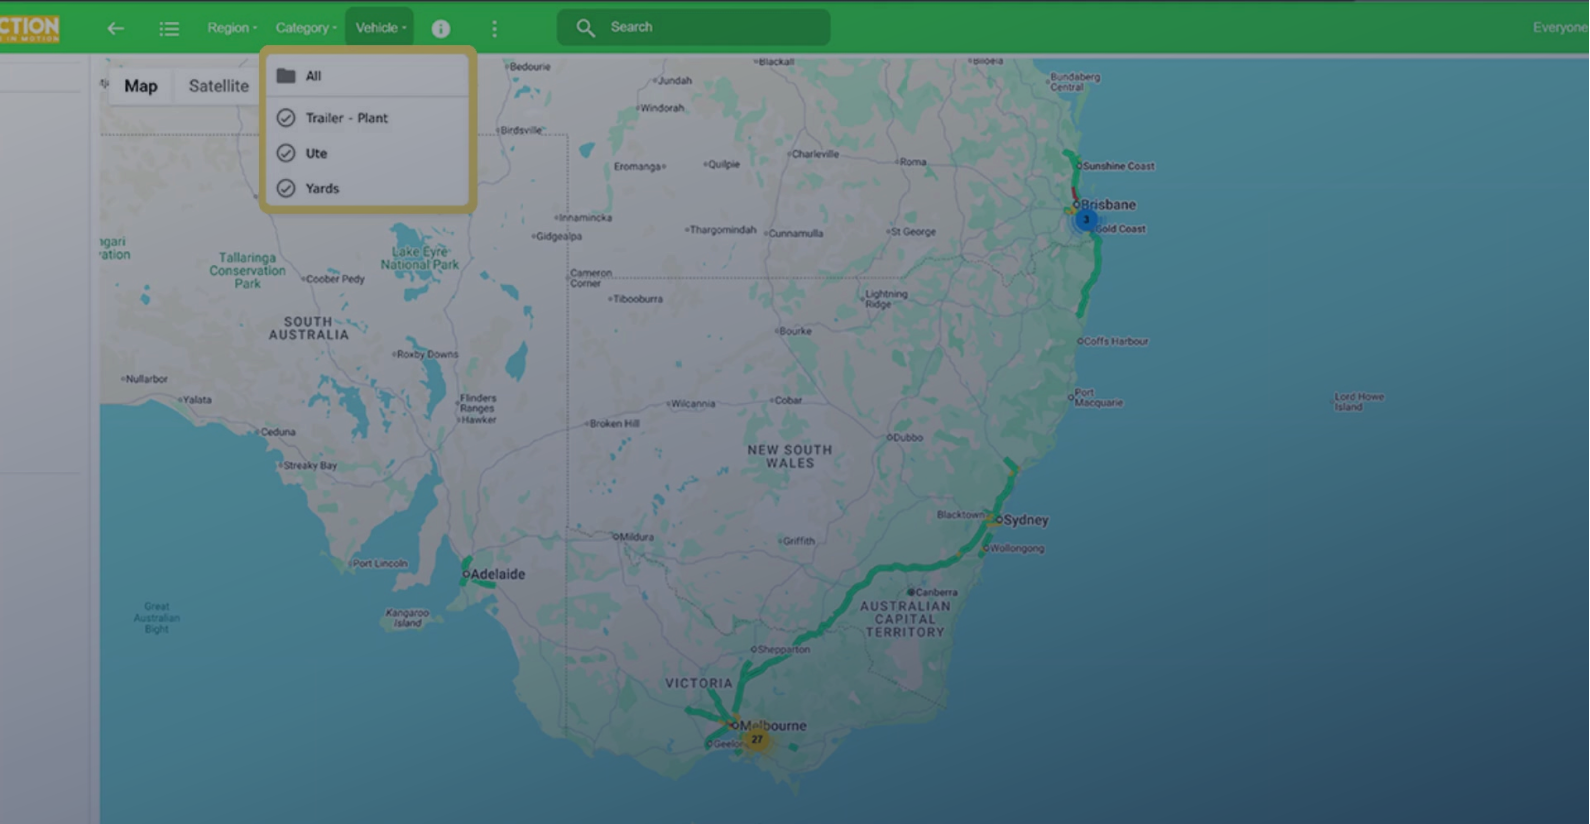

KYNECTION
KNOWLEDGE IN MOTION

FEATURE GUIDE

KYNECTION • AWARE (TRACKVIEW) • PART 2 OF THE AWARE MODULE

Filter and Locate *Vehicles in Real Time*

Finding a vehicle on the live map: narrowing a large fleet by region, category and vehicle, reading the status legend, switching to satellite, and opening a vehicle's live telemetry.

3 CHAPTERS

58 SEC

AWARE (TRACKVIEW)

WEB USERS • FLEET & SAFETY

FEATURE GUIDE • 58 SEC

What this feature covers

Three stages, six steps: opening Trackview, filtering and reading the map, and opening a vehicle.


CH 01	Open the live map Trackview opens onto the whole fleet.	00:00-00:15
CH 02	Filter and read the map Narrow the fleet, then read its state from the colours.	00:15-00:32
CH 03	Satellite view and vehicle detail Switch the base map, then open the vehicle itself.	00:32-00:58

- **Colour is status.** The legend distinguishes ignition on, driving, idle, offline, ended position and unmonitored, so fleet state reads without clicking anything.
- **Satellite helps on site.** Switching from map to satellite makes yard and site positions legible where street mapping is not.
- **Filters stack.** Region, category and vehicle narrow together rather than replacing each other.

READ AS Screens are captured from the walkthrough video at the timestamp shown on each step. Vehicle names, locations and speeds are demonstration data.

Open the live map

Trackview opens onto the whole fleet.

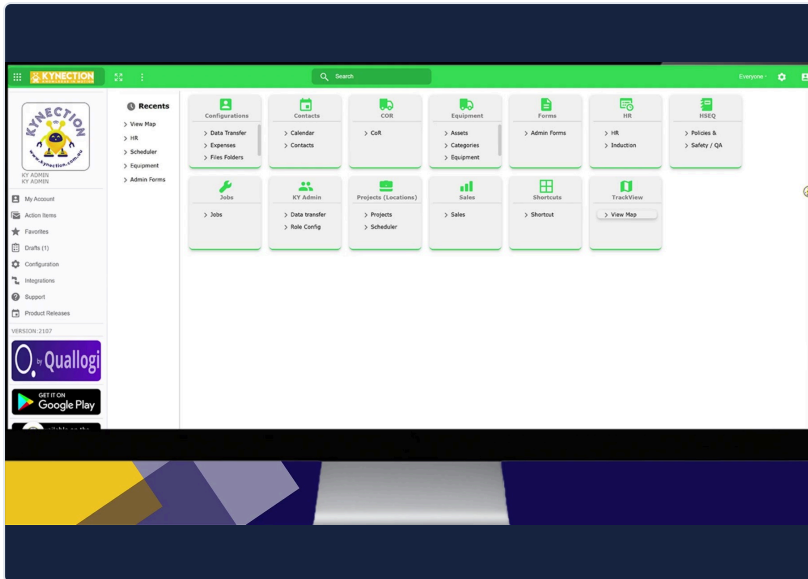


STEP 1 • 00:10 IN THE VIDEO

Start at the dashboard

The Kynnection dashboard carries every module you have access to.

CHAPTER 01 • STEP 1 OF 2

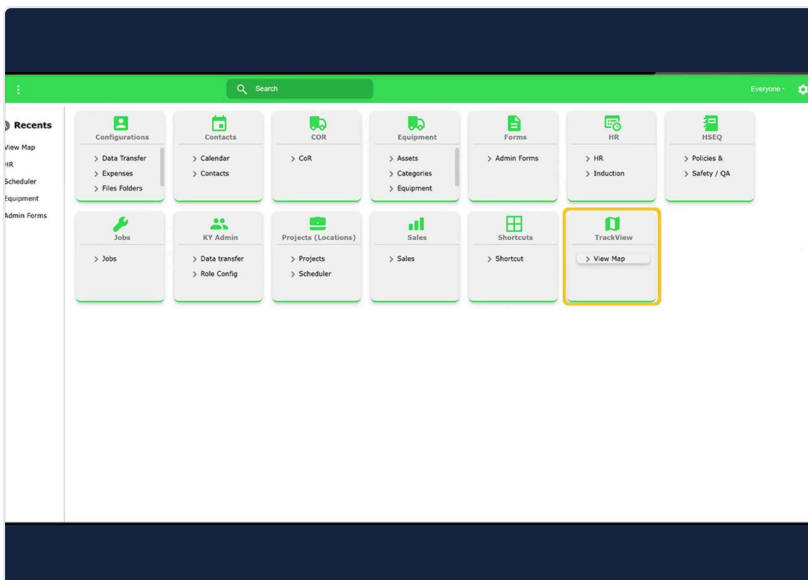

STEP 2 • 00:12 IN THE VIDEO


Open Trackview

Select **Trackview** to open the live tracking map.

CHAPTER 01 • STEP 2 OF 2

Filter and read the map

Narrow the fleet, then read its state from the colours.

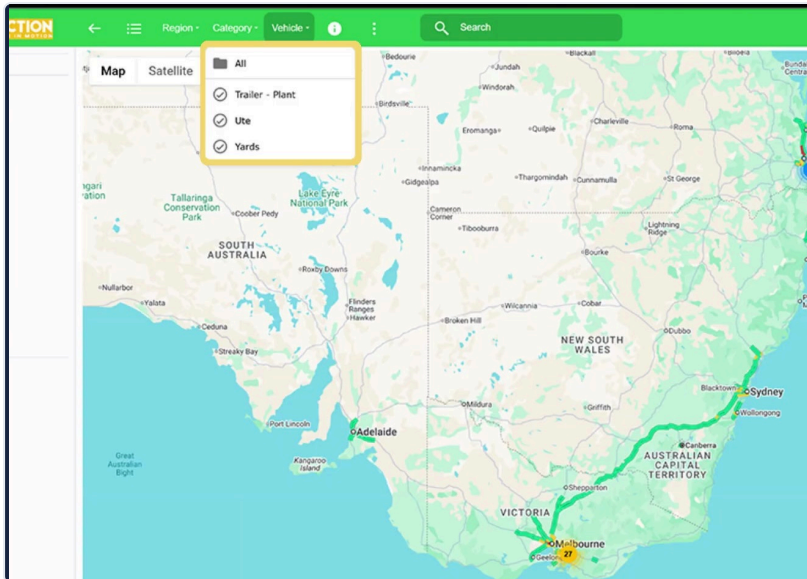


STEP 1 • 00:20 IN THE VIDEO

Apply the filters

Filter by region, category and individual vehicle to cut a large fleet down to what you are looking for.

CHAPTER 02 • STEP 1 OF 2

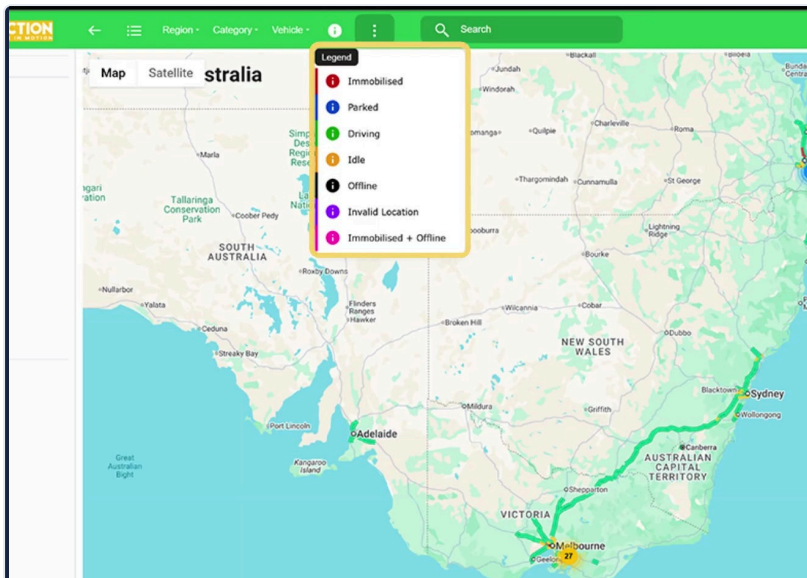

STEP 2 • 00:28 IN THE VIDEO


Read the status legend

The legend covers ignition on, driving, idle, offline, ended position and unmonitored, so the fleet's state is readable at a glance.

CHAPTER 02 • STEP 2 OF 2

Satellite view and vehicle detail

Switch the base map, then open the vehicle itself.

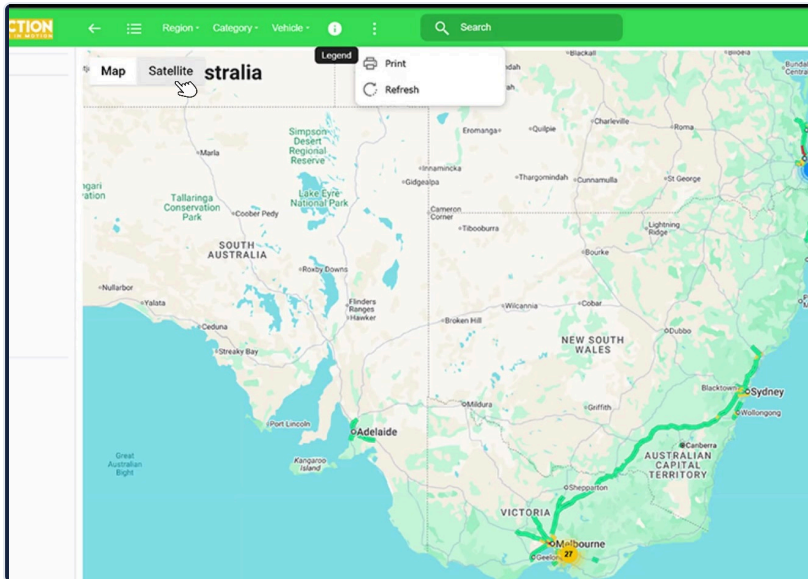


STEP 1 • 00:37 IN THE VIDEO

Switch to satellite

Satellite view makes yard and site positions legible where street mapping is not.

CHAPTER 03 • STEP 1 OF 2

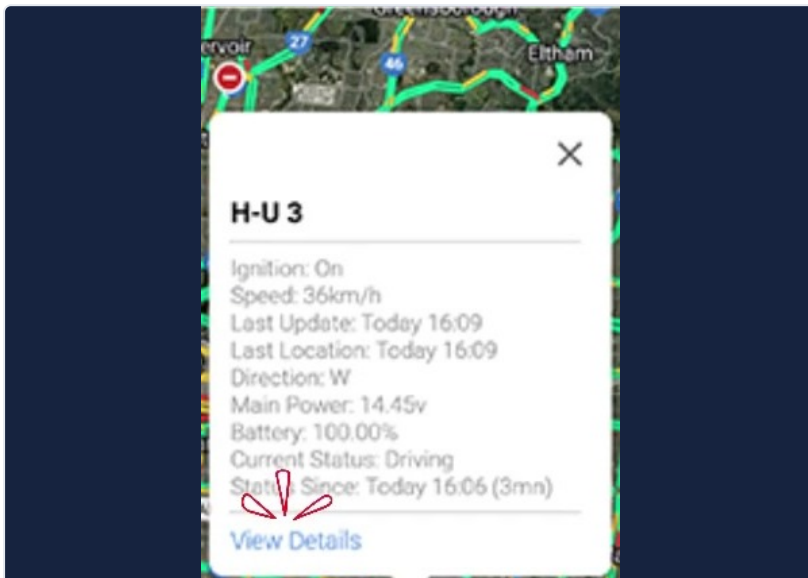

STEP 2 • 00:53 IN THE VIDEO

Open a vehicle

The vehicle card shows ignition, speed, last update, last location, direction, main power voltage, battery and current status with its duration.

CHAPTER 03 • STEP 2 OF 2

NEXT

Where to go next

This guide covers one part of the Aware module. The rest of the series covers the module end to end.

NEXT UP - Aware 03

Track vehicle mileage with trip reports

BACK TO Aware 01

Optimise fleet management operations (module overview)

THE REST OF THE AWARE MODULE

Ask your Kynecton account manager for the other guides in this series

MORE IN THIS MODULE

Aware 01 **Optimise fleet management operations (module overview)**

Aware 03 **Track vehicle mileage with trip reports**

Aware 04 **Track driver safety with AI cameras**

Aware 05 **Set up geofencing and monitor live fleet status**
